


Number of Wheel Stops Required per Parking Space.

Recommended installation layouts by model

550 mm

2 wheel stops per parking space


2 mounting holes per wheel stop

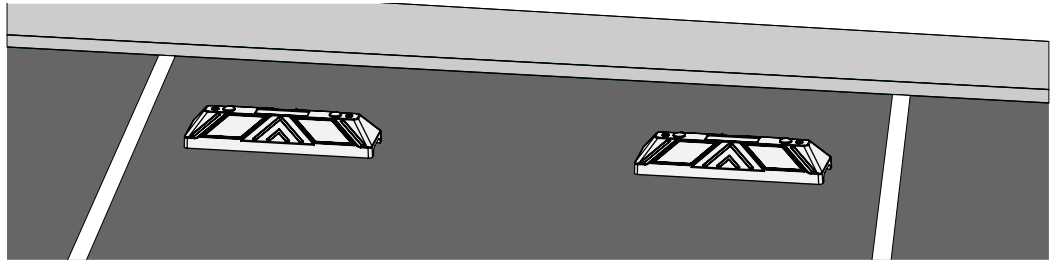

900 mm

2 wheel stops per parking space


2 mounting holes per wheel stop

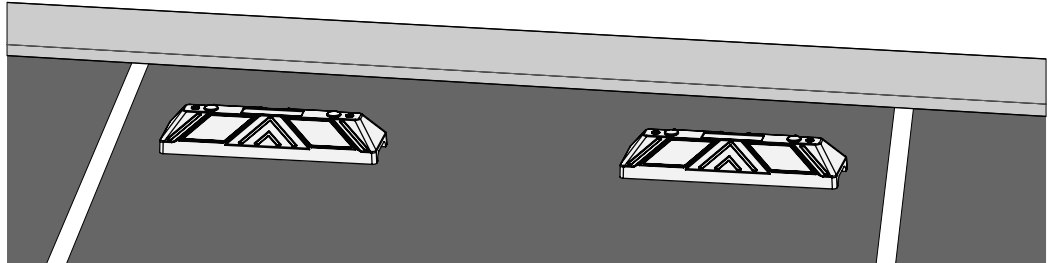

1220 mm

1 wheel stop per parking space


3 mounting holes per wheel stop

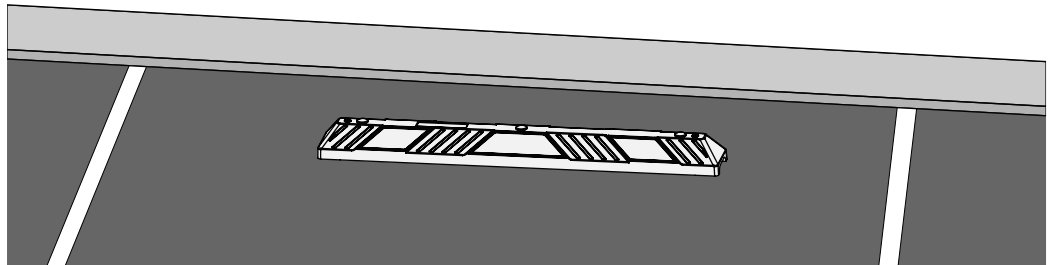

1650 mm

1 wheel stop per parking space


3 mounting holes per wheel stop

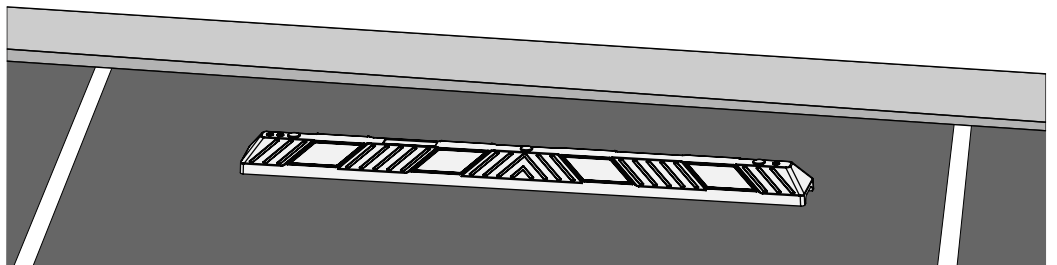

1830 mm

1 wheel stop per parking space

4 mounting holes per wheel stop

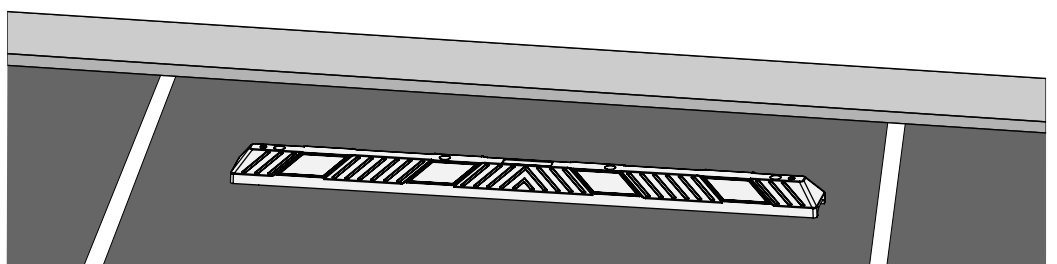


i Note: Typical parking bay width illustrated. Actual installation may vary depending on local parking regulations.

WHEEL STOP INSTALLATION GUIDE


i Note: Installation steps are identical for all wheel stop models. The number of mounting holes varies depending on the product length. The illustrations in this guide show the 1830 mm wheel stop.

1 Prepare the Tools and Components.

Mounting Hardware (Included)

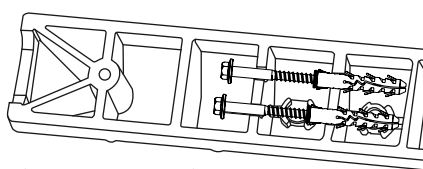

Tools (Required)

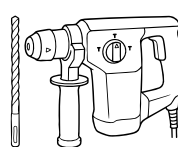


Tip: Recommended tools: Rotary hammer with a Ø17 mm masonry drill bit (260 mm long) and an impact driver fitted with a 17 mm deep impact socket (75 mm long).


2 Clean the Installation Area.




3 Mark the Installation Position.

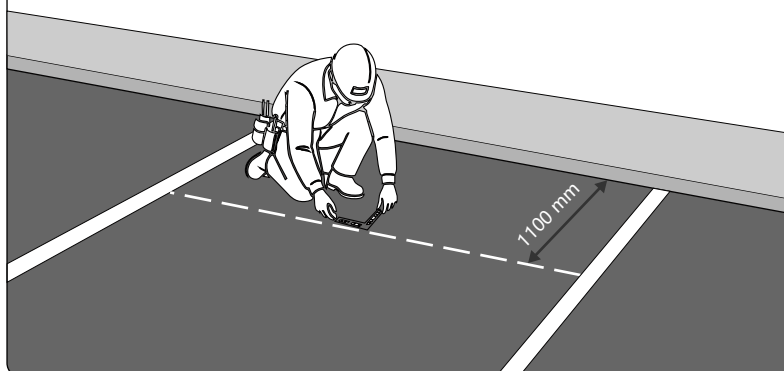


4 Position the Wheel Stop in Its Final Location.

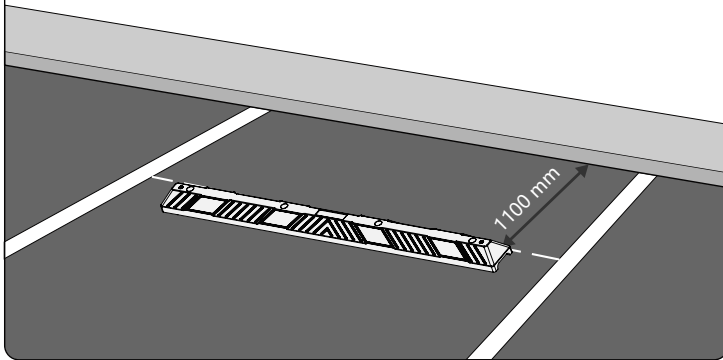


5 Drill Through the Mounting Holes Using a Rotary Hammer.

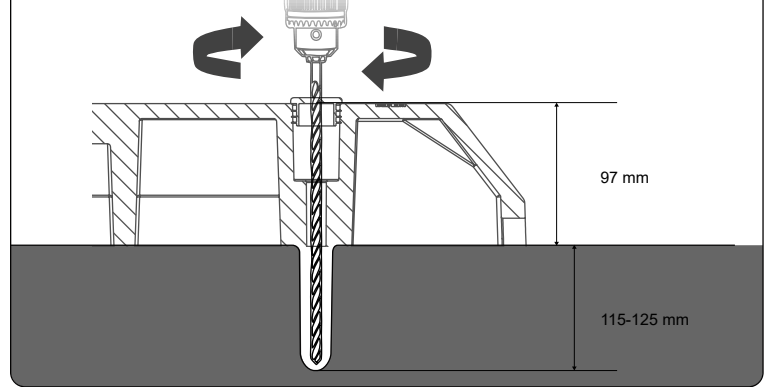


6 Insert the Anchors with a Rubber Mallet.

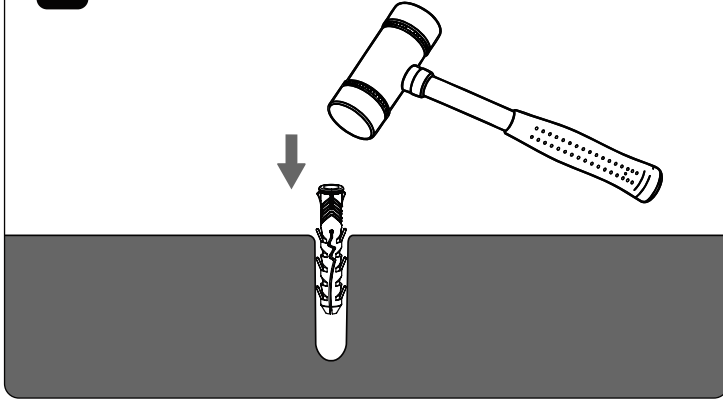


7 Reposition the Wheel Stop and Tighten the Coach Screws.

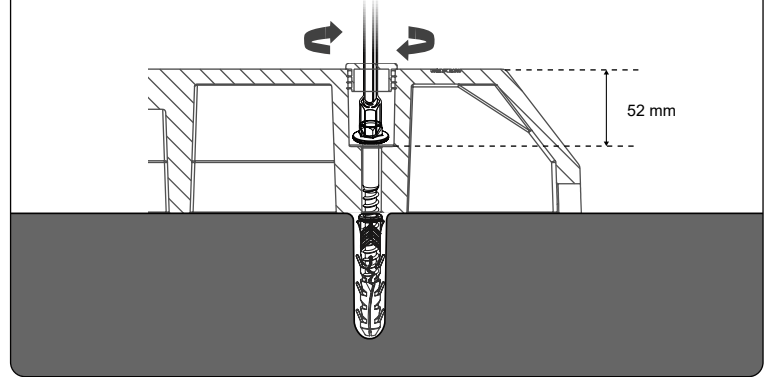

8 Fit the Plastic Caps.

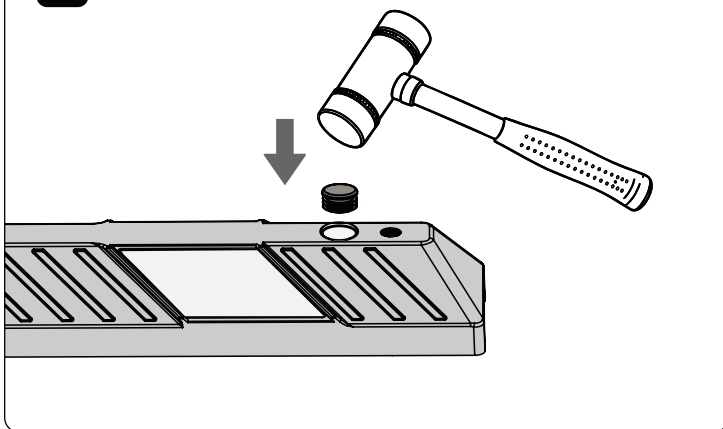

9 Installation Complete – The Wheel Stop Is Ready for Use.

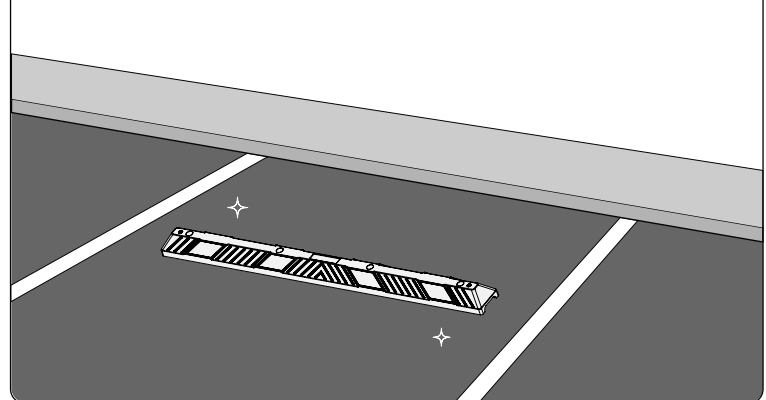

For more information about our products,
please visit:

www.sinoconcept.com

CONTACT US

contact@sinoconcept.com